


Thank you for purchasing our 100 litre Prestige Water Fence Panel Tank

Water butts can be installed either with a diverter which also acts as an overflow or with direct rainwater inlet and separate overflow. The benefit of a diverter is it also acts as the overflow, however the yield will depend on the diverter selected. The benefit of a direct inlet is that it allows all the water to be captured instead of a proportion, combining this with a leaf catcher allows visible and accessible maintenance.

The 2 no. drawoff points are drilled out on the customer side only and finished with a brass bung. The supplied tap can be fitted in either of the two drawoff positions. Should the neighbour use the tank the drawoff points should be drilled out with a 10mm drill bit.

Diverter installation

Please follow the instructions provided with the diverter. Ensure to install the diverter into the top outlet using the thread from the tank connector.

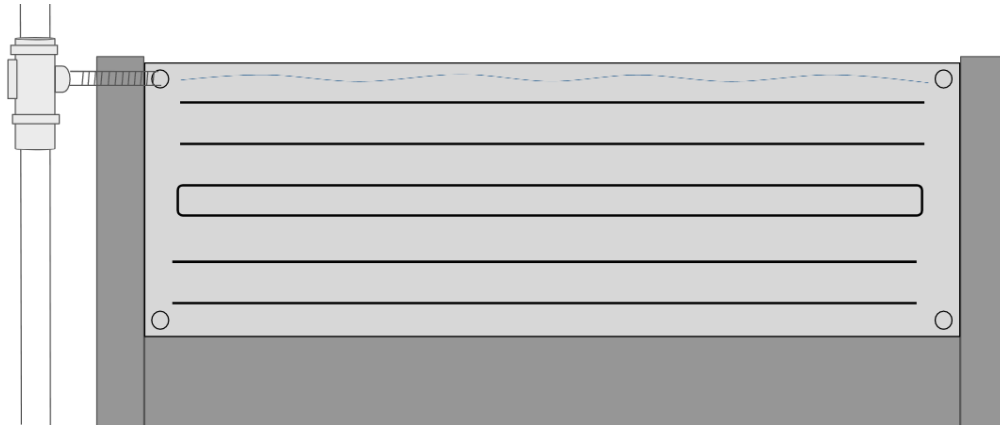

Offset kit / Overflow installation

To install the leaf catcher, simply remove the planter cap from the top of the tank and place the leaf catcher in the hole and sit the downpipe in the leaf catcher (see image below).

To install the overflow, screw in the thread of the overflow into the top adjacent corner outlet.

